



Change the Speed Lock Vise Jaws in 30 seconds

- 1** Install the Speed Lock Round Nuts onto a set of vise jaws with the socket head cap screws.
- 2** Slip the Speed Lock Vise Jaw assembly into the Keyholes in the mounting block and tighten the Vise Jaw.
- 3** After the Speed Lock Vise Jaw assemblies have been installed into the vise, to remove them, it only requires a quarter to a half of a turn of the socket head cap screw to loosen the vise jaw enough to easily remove the vise jaw from the mounting blocks.
- 4** The Speed Lock Round Nuts and socket head cap screw stay assembled to the vise jaws when they are not in use for a 30 second change over from one set of vise jaws to another.

Items included with the Vise:

One Set of 6" hardened Vise Jaws
One Set of Aluminum Vise Jaws
12 Round Nuts and 12 Caps Screws
Vise Handle



MADE IN

U . S . A